

Control of masses, activities and doses during remediation measures at a radioactive contaminated site in Hanover

Rainer Gellermann¹
Kristin Nickstadt¹
Imke Goebel-Stadler²
Ilka Grundmann²,

¹ **Fugro Consult GmbH**
Daimlerstraße 18
D-38112 Braunschweig
r.gellermann@fugro.de

² **Landeshauptstadt Hannover**
Boden- und Grundwasserschutz
Prinzenstraße 4
30159 Hannover

Imke.Goebel-Stadler@Hannover-Stadt.de



Background: History


- 1862: Foundation of the „Chemical Plant E. De Haen“ in the village List near Hanover.
- 1865-68: At the site of the current contaminated ground a larger plant was built. Production of inorganic chemicals.
- 1902: Company moved to Seelze near Hanover.
- Residues (heaps) were transferred to a site northward (now: „Lister Damm“) and disposed of. The disposal site was later developed to an allotment area.
- 2008: Discovery of radioactive contaminations in the residential area around the “De-Haen-Platz” in Hanover-List (only by chance!).

HUNDERT
JAHRE
CHEMISCHE
FABRIK
E·DE HAËN



Erste Arbeitsstätte der Firma E. de Haën
1861

Situation in 2008 (*)

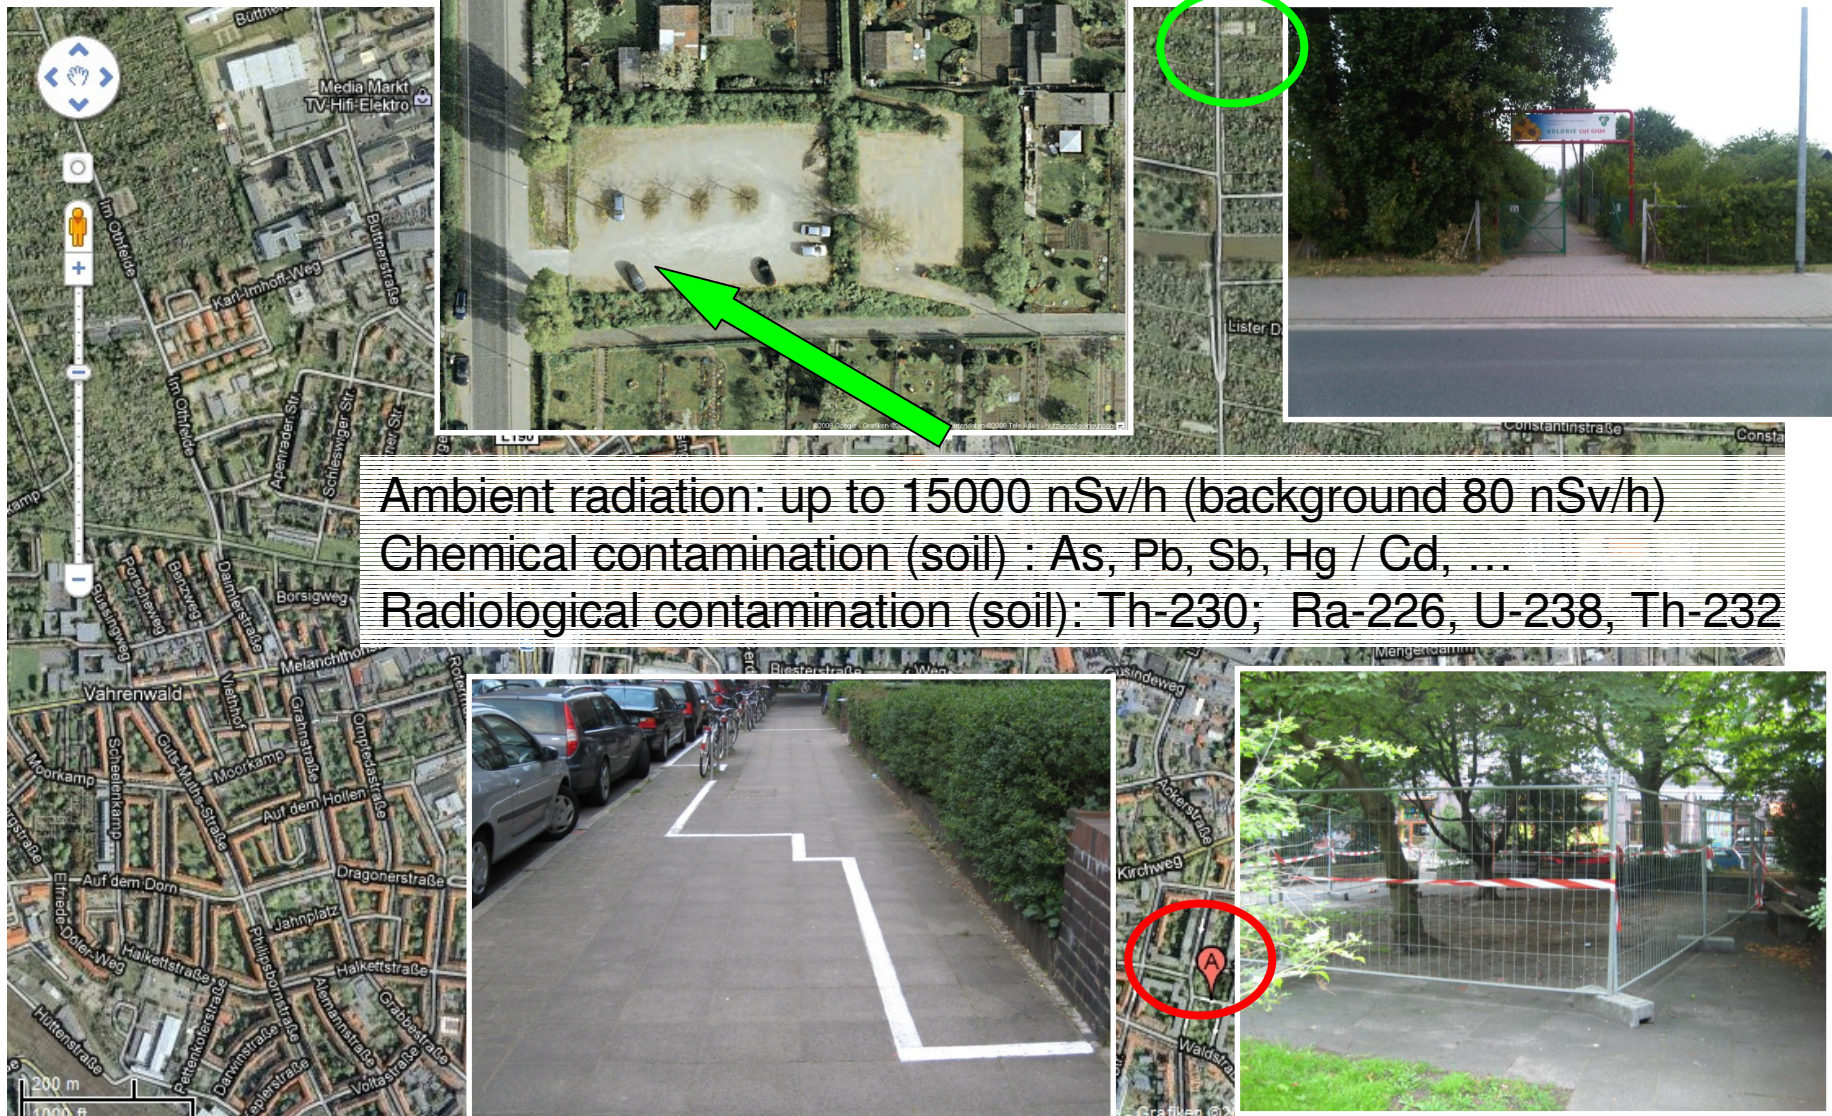

Ambient radiation: up to 15000 nSv/h (background 80 nSv/h)
Chemical contamination (soil) : As, Pb, Sb, Hg / Cd, ...
Radiological contamination (soil): Th-230; Ra-226, U-238, Th-232

(*) Contaminated sites on ground owned by City of Hanover

Remediation measures

Landeshauptstadt



Hannover



Remediation concept

Goals:

- Reduction of health risks to a long-lasting acceptable level (according to criteria of soil protection regulations! → 500 nSv/h / 300 nSv/h).
- Area must be usable.
- Preferred use: waste container parking lot (for garden waste)
- The measures have to be restricted to the essentials.

Technical solution:

- Partial excavation of contaminated soil (only to the necessary extent!)
- Disposal of the excavated materials on a landfill.
- Covering of remaining contaminations by uncontaminated construction materials.

Remediation measures

Landeshauptstadt



Hannover



Technical execution – organisation

- Responsible owner: State Capital Hanover
- Contractor 1: technical contractor
- Contractor 2: construction supervision and management
- **Contractor 3: radiological supervision and waste management**
- Contractor 4: bomb disposal service (partly)

Authorities (RP Authority – Trade Supervisory Office)

Issues of radiological supervision and waste management

- Determine the necessary extend of excavation (reduce waste amount but ensure compliance with remediation targets).
- Estimate the doses of workers.
- Manage waste materials (→ ensure low doses of workers at the disposal site, assignment of waste to the ADR Class 7)

Challenge

- Do not hinder the execution of the construction: “be fast, but not furious”.

Task 1 Determine the necessary extend of excavation

- Dose at the surface has to be lower than 300 nSv/h
- Assessment of shielding of covering → depth of excavation
- Measurements of dose rates directly over the ground
- Apply a nomogram for decision making

Aushubtiefe		ODL (aufgesetzt) Baugrubensohle
0,0 m u. GOK	—	0,3 μ Sv/h
0,1 m u. GOK	—	0,6 μ Sv/h
0,2 m u. GOK	—	1,2 μ Sv/h
0,3 m u. GOK	—	2,4 μ Sv/h
0,35 m u. GOK	—	3,6 μ Sv/h
0,4 m u. GOK	—	4,8 μ Sv/h
0,5 m u. GOK	—	9,6 μ Sv/h




Example 15,2 μ Sv/h in 30 cm depth → not sufficient

Task 2: Estimate the doses of workers

Planning

Pre-estimation of doses based on the specific knowledge of materials

- Planned duration of the work
- Expected activities
- Nuclide composition (standardised: $a_{iN}/(a_{Th232max}+a_{U-238max})$)

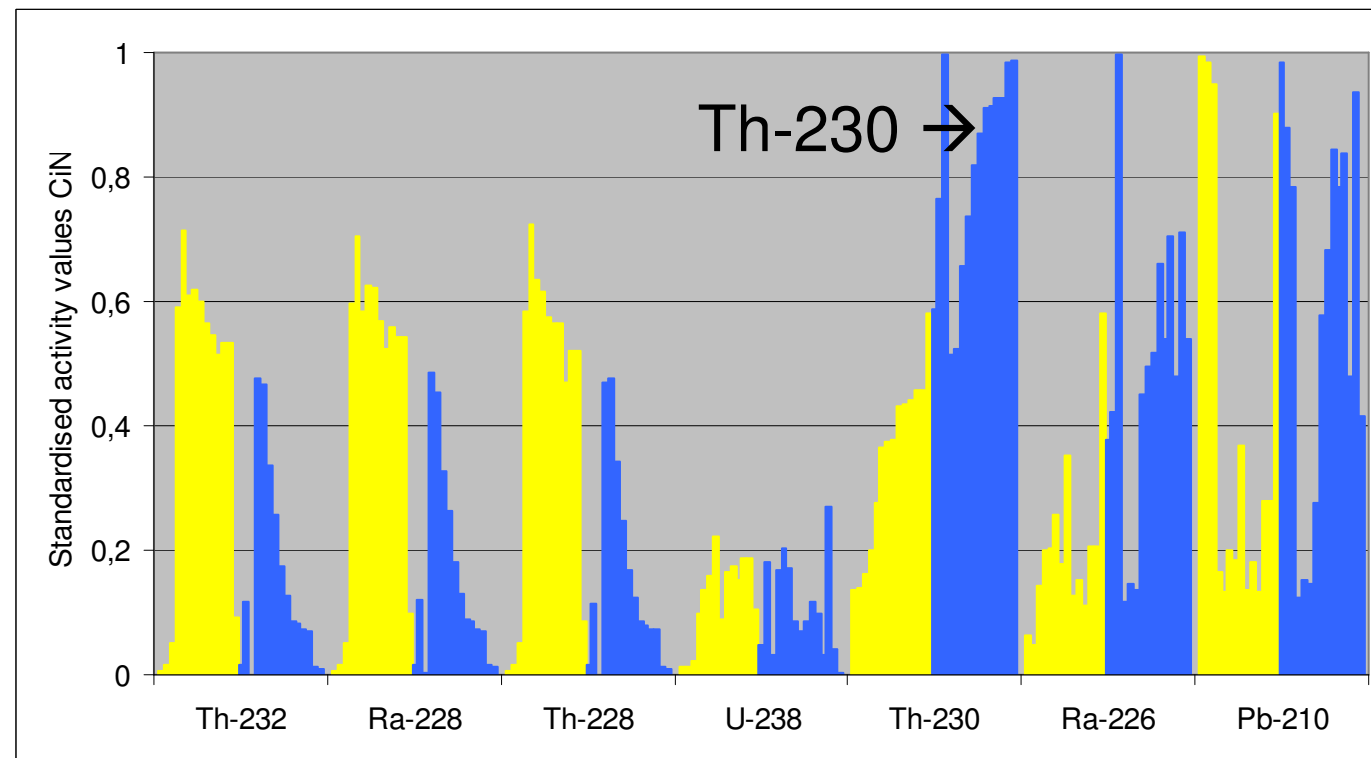

Task 2: Estimate the doses of workers



	External dose	inhalation	ingestion	total dose
	mSv	mSv	mSv	mSv
Excavator driver	0,032	0,032	0,017	0,081
wheel loader driver	0,035	0,013	0,007	0,055
Supervisor (with sampling)	0,18	0,13	0,007	0,32
Remediation worker	0,45	0,032	0,017	0,50
Public	0,0022	0,0045	0,00004	0,0068

Health and Safety Plan.

- Radioactive **and** other toxic substances (Hg, Pb, Sb, Cd, ...)
- Radioactivity should be considered as a toxic substance like others!
ALARA is applicable for chemical contaminants, too.



Task 2: Estimate the doses of workers

Execution phase

Dose surveillance was NOT necessary (estimated doses lower 1 mSv)

Dose measurements with personal dosimeters (film dosimeters) for some persons

Measurements of dose records of the “radiological supervisor” with RadEye PRD

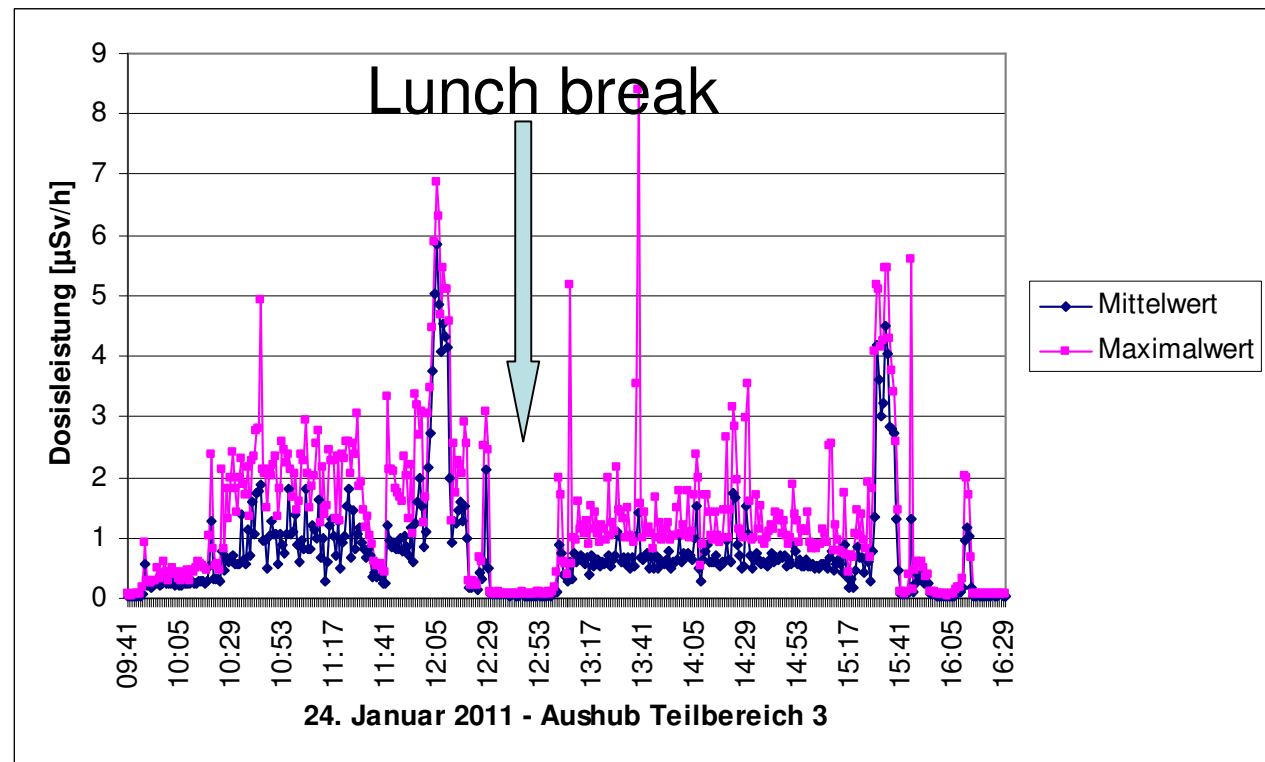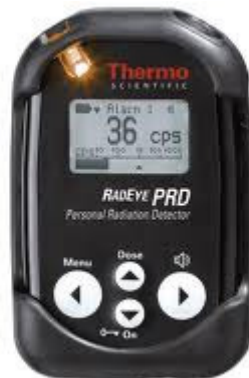

Task 2: Estimate the doses of workers

Datum	Auslesewert [μ Sv]	Auslesewert [h]	Bearbeiteter Teilbereich
08.12.2010	0,6	04:00	Gut Grün 31 und Teilbereich 7
13.12.2010	2,55	06:30	Gut Grün 31 und Gut Grün 32
03.01.2011	2,6	05:45	Gut Grün 32
04.01.2011	3,1	06:00	Gut Grün 32
05.01.2011	3,3	05:53	Gut Grün 32
07.01.2011	4,42	07:06	Gut Grün 32
10.01.2011	2,72	07:21	Gut Grün 32
11.01.2011	1,05	03:19	Gut Grün 32
12.01.2011	2,59	07:44	Gräben Gut Grün 31/32
13.01.2011	3,84	07:43	Gut Grün 32
14.01.2011	1,95	02:15	Gut Grün 32
18.01.2011	5,3	06:23	Teilbereich 4
19.01.2011	27,8	08:30	Teilbereich 4
20.01.2011	14,5	03:25	Teilbereich 4
21.01.2011	2,7	05:22	Teilbereich 4
24.01.2011	5,33	06:30	Teilbereich 3
25.01.2011	4,01	06:21	Teilbereich 3
26.01.2011	6,94	07:20	Teilbereich 3
27.01.2011	7,66	05:44	Teilbereich 2
31.01.2011	1,54	02:15	Teilbereich 2
01.02.2011	2,08	05:55	Hecken und Teilbereich 1
02.02.2011	5,14	08:09	Hecken und Teilbereich 1
03.02.2011	17,6	07:33	Teilbereich 1
04.02.2011	5,16	03:15	Teilbereich 1
07.02.2011	4,55	06:00	Teilbereich 1
08.02.2011	2,91	05:45	Gut Grün 1 Fischbecken u. Mulden

Dose record
December-February:
0.14 mSv

Task 2: Estimate the doses of workers

Results obtained

	Oct-Nov	Dec-Feb	Prognosis
	mSv	mSv	
Excavator driver	< 0.1	0.1	0.081
wheel loader driver	<0.1	0.2	0.055
Supervisor (with sampling)	<0.1	0.2	0.32
Remediation worker	<0.1	0.3	0.5

Task 3 Waste management



- Sampling
- Determination of dose rates (*)
- Laboratory analysis

(*) NaI-detector



Big-Bags


- Determination of dose rates (4 measuring points)
- Sampling + analysis

Container

- Determination of dose rates (10 measuring points)
- Sampling + analysis




Task 3 Waste management

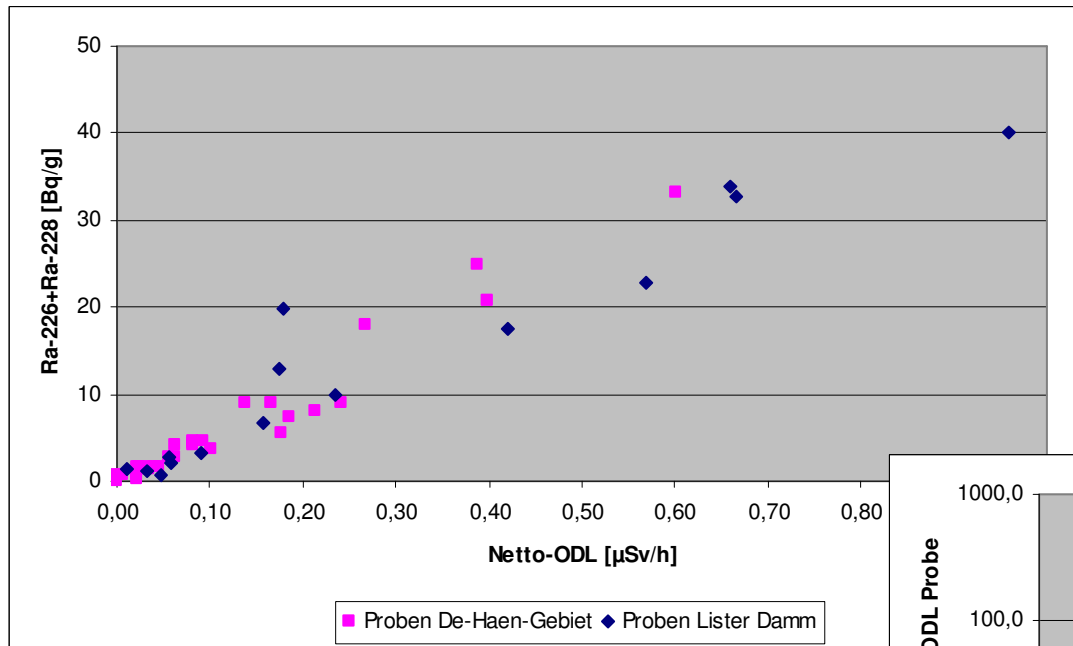

Calibration curves

Comparison of sum activities Ra-226+Ra-228 obtained from samples and from dose rate measurements at packages

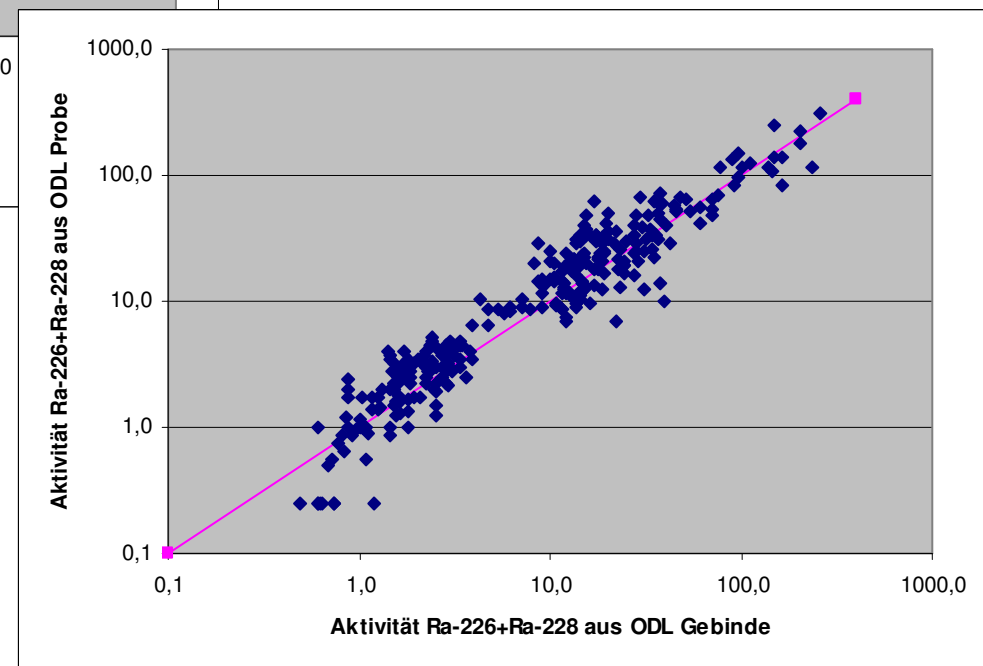

Task 3 Waste management

Waste classification

Class 0: radioactively not contaminated waste → waste treatment facility

Class 1: radioactively contaminated waste, exempted from ADR Class 7 → landfill

Class 2: radioactively contaminated waste, transport according to ADR Class 7 → landfill

Class 3: “radioactive waste” → federal state collecting facility for radioactive waste.

Situation in 2010/11



Both sites decontaminated ("partial remediation").
Ambient radiation: Lower than 500 nSv/h (background 80 nSv/h)





Thank you for attention

Danke für Ihre Aufmerksamkeit

Contact / Ansprechpartner:

Dr. Rainer Gellermann

Mail: r.gellermann@fugro.de

Phone: +49531 213699-10 / Mobile: +49176 12622727